

# PT & PTS Series Scissor Lifts

## Installation, Operation and Service Manual

Model Number \_\_\_\_\_

Serial # \_\_\_\_\_

Date placed in service \_\_\_\_\_

**IMPORTANT: READ CAREFULLY  
BEFORE INSTALLING OR OPERATING LIFT**

Part orders are subject to a \$50 minimum charge.



This manual was current at the time of printing. To obtain the latest, most updated version, please contact Presto Lifts Customer Service Department or go to our website: [www.PrestoLifts.com](http://www.PrestoLifts.com) -- you will find a complete list of current owner's manuals to print.

# CONTENTS

<b>SECTION 1:</b>	
INTRODUCTION .....	4
<b>SECTION 2:</b>	
SAFETY .....	4
<b>SECTION 3:</b>	
INSTALLATION .....	5
A. Installing .....	5
B. Electrical .....	5
C. Hydraulic .....	6
D. Testing the Tilter with No Load .....	6
<b>SECTION 4:</b>	
OPERATION .....	6
A. Method of Operation .....	6
B. Operation Procedures .....	7
<b>SECTION 5:</b>	
MAINTENANCE .....	8
A. Routine Maintenance .....	8
B. Troubleshooting Maintenance .....	9
<b>SECTION 6:</b>	
SERVICE .....	10
A. Replacing Cylinder Seals .....	10
B. Replacing Rigid & Swivel Wheels .....	10
C. Ordering Replacement Parts .....	10
<b>LIST OF FIGURES :</b>	
Figure 1 Loading and Operational Diagram .....	7
Figure 2 Pinch Point Diagram .....	7
Figure 3 Maintenance Chock .....	9
Figure 4 Wiring Diagram 12V DC .....	12
Figure 5 Hydraulic Schematic .....	12
Figure 6 Component Identification - DC Units .....	13
RESTOCKING POLICY .....	14
RETURN MATERIAL AUTHORIZATION (RMA) PROCEDURES .....	15
ORDERING REPLACEMENT PARTS .....	16
WARRANTY .....	18

## SECTION 1

# INTRODUCTION

The PT & PTS Series Container Tilters are designed for lifting, tilting and positioning a wide variety of loads. Each tilter has front, rigid wheels and large rear swivel casters, allowing the tilter to be easily positioned under the container to be tilted. A floor lock is provided for maintaining the tilter in position during loading and unloading.

This manual provides all the information for the safe and proper installation, operation and maintenance of Presto Lifts PT & PTS Series Portable Container Tilters. It is important that this manual be read by all personnel involved with the installation, maintenance or operation of the tilter. WHERE UNIQUE SITUATIONS ARISE, WHICH ARE NOT COVERED IN THIS MANUAL, CALL PRESTO LIFTS, INC. FOR FURTHER INSTRUCTIONS. Additional manuals are available upon request.

The Container Tilter has a nameplate, which provides the load capacity rating, serial number and model identification. Please refer to these numbers when ordering parts or requesting further information.

The PT & PTS Series Container Tilter is designed for in-plant, non-hazardous location use only.

## SECTION 2

# SAFETY

The safety of all persons installing, using, servicing, or working near the unit is of paramount concern to Presto Lifts. The tilter is a powerful machine with moving parts, and is **capable of causing personal injury if proper precautions are not taken**. Therefore, throughout this manual, Presto Lifts has identified certain hazards, which may occur in the use of the unit, and provided appropriate **instructions** or precautions that should be taken to avoid these hazards. In some cases, Presto Lifts' has also pointed out the **consequences** that may occur if Presto Lifts' instructions or precautions are not followed. Presto Lifts uses the following nationally recognized system for identifying the severity of the hazards associated with its products:

**DANGER** – Immediate hazard that will result in severe personal injury or death.

**WARNING** – Hazard or unsafe practice, that could result in severe personal injury or death.

**CAUTION** – hazard or unsafe practice, that could result in minor personal injury or property damage.

**In the interest of safety, please read the entire manual carefully. You must understand the material in this manual before you install, use, or service the unit. If you have any question about any of the instructions in this manual, please contact Presto Lifts Inc. at 1-800-343-9322.**

### **WARNING!**

- **Do not perform any repair work on tilters with the forks in a raised position.**
- **All personnel must stand clear of the tilter when container is being tilted.**
- **Do not put hand or feet under the forks or the container while lowering or raising the tilter.**
- **Do not work under the forks or under the container positioned on the forks.**
- **Do not stand, sit or climb on the forks of the tilter, either during or after operation.**
- **Do not roll the tilter on soft, uneven or unstable surfaces with a load.**
- **Do not exceed load capacity.**
- **Do not try to raise or lower the tilter while moving the tilter.**

Place load in center of the forks and against the tilter platform. Be sure that the load is secured properly.

## **SECTION 3 INSTALLATION**

Upon receipt of the Portable Container Tilters, inspect the equipment completely to determine if there is any shipment damage and that the tilter is complete. Do not use the tilter if there appears to be any damage. With the tilter in a collapsed position or the forks in a down position, check the following by carefully removing the battery housing cover and the shield that protects the top of the power pack area.

1. Check for signs of damage, especially to the electricals and hydraulic liquid around the connections.
2. Check all connections for tightness. Also check for visible hydraulic liquid around the connections.
3. Check for any physical damage to the frame or wheels.
4. Inspect the forks for damage, either twisted or bent.

### **CAUTION!**

**Do not operate the tilter before performing the installation procedures specified in section B, C, D and E. Severe damage to the tilter may occur.**

#### **A. INSTALLING:**

Read all of the instructions prior to starting or connecting the tilter.

#### 1. Working Area

- a) Make sure that the floor and the operation area is flat, stable, relatively smooth and free from dirt, obstacles and surface defects.
- b) Move the empty tilter to exact operating area ensuring that there are no encumbrances due to components or equipment in the general area.

### **CAUTION!**

**Do not operate the unit out of doors or any place where it could get wet. If any of the electrical components get wet, the worker may receive a shock. The electrical components may also fail. Make sure that all four (4) wheels of the tilter are in contact with the floor.**

### **WARNING!**

**If the unit is mounted in an unstable area it may tip over when in use. To avoid this problem always use the unit on a solid and stable surface.**

#### **B. ELECTRICAL:**

##### 1. DC Motor Models

- a) Motors on the Portable container Tilters are special, intermittent duty motors with high pull up torques. These motors require heavier duty controls than standard motors. A DC/ 1HP motor powers the standard PT & PTS units. The battery source is 12 volt 60 AMP gel cell battery for the 2,000 lb. tilter, and a 72 AMP gel cell battery for the 4,000 lb. tilter. Schematics are provided at the end of this manual for the connections of the dc operated tilters.
- b) The tilters with the DC motors are shipped with the positive terminal of the battery disconnected. Connect the positive terminal being sure not to touch any of the grounded parts while doing so with the screwdriver or the wrench. (See figure 3 for electrical schematic.)

##### 2. AC Motor Models

The optional motor available is a 115-volt AC motor, which is a special, intermittent duty motor with high pull up torques. These motors require heavier duty electrical controls and outlets than standard motors.

### **CAUTION!**

**All wiring must conform to local codes and must be performed by licensed electricians. The 1 horsepower AC motor requires a 115 volt 20 AMP fused outlet.**

### **WARNING!**

**Do not tamper with or remove the cover of the electrical junction box. Only authorized, qualified personnel should service the electrical system.**

**Motor direction is critical. This motor has been wired according to its schematic and should not be tampered with as it may lead to pump or motor failure.**

### **C. HYDRAULIC:**

1. Before using the tilter, check the hydraulic oil level by removing the solid plug from the reservoir, which is located at the upper end of the left support. Remove the plug, check for oil and add oil if necessary. The level should be approximately  $\frac{1}{2}$ " below the surface. Replace the plug with the vent plug provided; if the vented plug is not installed you may damage the pump.
2. Use hydraulic oil only in the tilter. The tilter has been supplied with a Citgo AW32. When adding fluid, use only the recommended oils listed in the hydraulic schematic (figure 4) located in the rear of this manual.

### **CAUTION!**

**The Portable Container Tilters are designed for normal factory environments. Where below freezing temperatures sometimes exist, special fluids must be used. Contact Presto Lifts Inc. for further information when freezing conditions exists.**

### **WARNING!**

**Do not use automotive hydraulic brake or transmission fluids, they will damage and pose a serious fire hazard.**

### **D. TESTING THE TILTER WITH NO LOAD:**

Before operating the tilter, read and understand this section.

1. Before testing the tilter, clear the area of any loose material. Be sure the tilter has no obstructions above it or on any side. Using the controls provided, briefly operate the tilter (5-10 seconds). If the tilter begins to rise with a humming sound and functions properly, continue to the full upright position.

### **CAUTION!**

**If the tilter does not rise immediately, or there is any operational problem, stop it immediately. Before continuing, check the rotation of the pump and motor and the voltage at motor terminals, again briefly operate the tilter. If the tilter does not move smoothly with the humming sound, stop and review the procedures in the section on troubleshooting.**

2. After raising the tilter completely, lower the tilter completely. It should move slowly and smoothly without a humming sound. If the tilter operates properly, raise and lower the tilter and stop at different levels in order to familiarize yourself with the tilter's operations and movements.

### **WARNING!**

**As the container tilter platform and forks move up and down, pinch points are created at locations near the base of the base of the frame. While operating the tilter the operator should be standing behind the tilter located near the battery and power pack area, In that way, the operator's arms, legs or clothing will not be caught in the moving parts. During operations the operator should avoid the pinch point areas, which are located on either side of the tilter. See the diagram pointing out the particular pinch points (figure 1).**

## **SECTION 4**

# **OPERATION**

### **A. METHOD OF OPERATION:**

All Portable Container Tilters are provided with a special hydraulic relief valve, which is factory preset to the maximum safe capacity of the container tilter (see the nameplate attached to the tilter). Activating and holding the up switch will energize the motor. The motor is attached to a positive displacement pump, which draws hydraulic fluid from the reservoir and transfers it under pressure to the cylinder. This forces the piston forward and the forks to rise in a ninety-degree arc. Releasing the up button will stop the tilter. A check valve between the pump and piston holds the forks in position. De-

pressing and holding the down button of the switch will energize a solenoid, which allows the oil from the cylinder to return to the reservoir through a preset flow control. This allows the tilter to lower smoothly and at a controlled speed.

**CAUTION!**

**Do not maintain the up button on the switch energized if the tilter does not move or has not reached its upper limit. This may cause damage to the motor, pump and controls.**

**B. OPERATION PROCEDURES:**


In order to operate the tilter, follow these operating procedures:

1. Read and understand all the instructions before operating, if the tilter has modifications or accessories, read and understand their functions.
2. Load the tilter correctly (figure 1.) Refer to the attached nameplate for load capacity information.
  - a) Do not load the tilter while it is running.
  - b) Do not exceed the maximum rated load (note that load capacity is on the nameplate of the tilter).
  - c) Engage floor lock prior to loading tilter.
  - d) Place load in the center and at the very back of the forks.
  - e) If the load is unstable or may become unstable, fasten it into position.
3. Operate the Tilter
  - a) To raise the tilter, press and hold the up button on the switch.
  - b) To lower the tilter, press the down button on switch.
  - c) Release the button to stop the tilter in either direction.
4. Wait until the tilter has come to a complete stop before loading or unloading.
5. Stand clear of the tilter when operating in order to avoid injury.


**WARNING!**

- a) Do not stand, sit or climb onto the tilter.
- b) Do not load or unload a moving tilter.
- c) If the tilter fails to move or exhibits strange movements or sounds, stop immediately. Do not operate the tilter until it has been checked and repaired.
- d) Obey all warning labels.

**FIGURE 1: Loading and Operational Diagram**

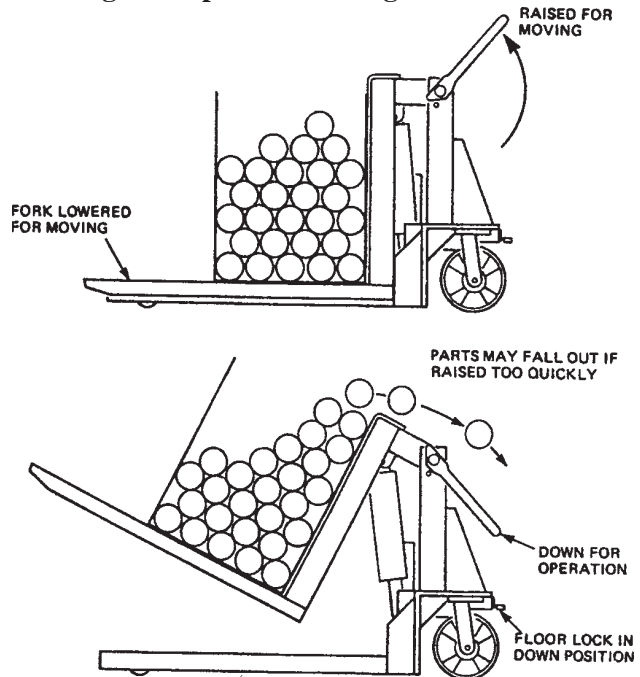

**FIGURE 2: Pinch Point**

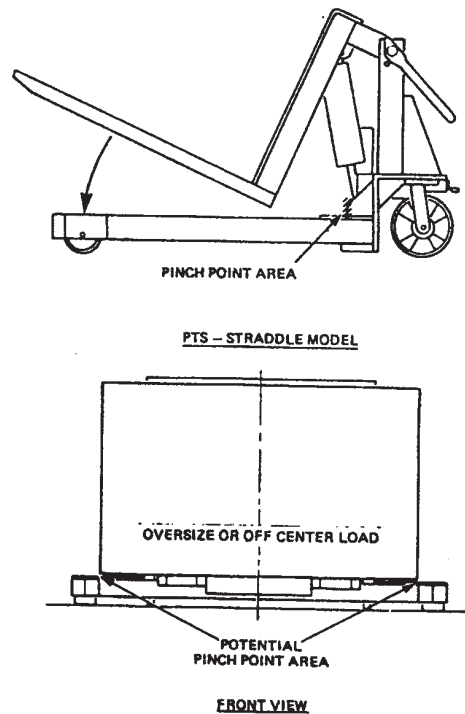

## 6. Moving the unit

- a) When moving an empty tilter be sure the forks are in a completely lowered position.
  - i) Release the floor lock.
  - ii) Set your push handle into position (see figure 1). The figure shows the handle in its raised and lowered position. The handle is controlled by a stop pin to prohibit travel beyond a safe pushing point.
  - iii) With the handle in an up position, the tilter can now be carefully moved forward. When pulling the unit keep your feet clear of the caster wheels.
- b) When moving a loaded tilter, procedures are as follows: lower the tilter forks until the container legs or base is  $\frac{1}{2}$ " inch to 1" inch above the ground, then proceed as previously discussed with an empty tilter.

### **WARNING!**

**Do not move the unit with the fork in a raised position. Moving a raised container could cause product to fall out or cause the basket or container to become unstable, and thereby, could cause injury.**

**As you move the unit in a backward direction, keep your feet clear of the swivel casters. When moving a loaded tilter it would be safer for two (2) operators to direct the tilter.**

## SECTION 5 **MAINTENANCE**

Generally, the Portable Container Tilter Lift will require little maintenance. However, routine inspection and maintenance will minimize costly repairs or hazardous conditions.

### **WARNING!**

**Before servicing the unit, read and understand this entire section and the section entitled Operating Instructions.**

**Never go under or service a tilter with a load on the forks or with the forks in a raised position. Always service the tilter in a down position.**

## **A. ROUTINE MAINTENANCE:**

1. All routine inspection maintenance should be performed monthly, and can be performed on the Portable Container Tilter Lift in a down position. Before performing any maintenance, shut the power off. In the case of the 115-volt, remove the plug from the receptacle. When servicing a battery-operated unit, disconnect the positive terminal from the battery. Remove the safety shelf cover and the battery cover from the tilter. By doing this you will make available all of the components that may require servicing.
2. Periodic maintenance checks and service:
  - a) Check the oil level and add oil if necessary according to the instructions on the hydraulic schematic.
  - b) Check the snap rings on the pivot bar that holds the tilt forks in place, if damaged, replace them.
  - c) Check hydraulic lines for damage or leaking. Replace if damaged.
  - d) Check for oil spots or leaks around fittings. Trace leaks to the proper fitting and tighten.
  - e) Check wiring for damage. Replace immediately if any signs of wear are evident.
  - f) Bearings on all tilters are permanently lubricated and require no servicing. (Do not oil or grease.)
  - g) The rear swivel casters should be inspected for lubricant wear or cracks. Replace if required. Grease if needed.
  - h) Front load wheels should also be inspected for wear or cracks. Replace if damage.
3. Charging a gel cell battery:
  - a) Lower lift to its full lowered position.
  - b) Remove battery cove, shield, positive and negative terminals.
  - c) Do not attempt to remove battery caps or covers.
  - d) Connect battery charger positive and negative terminal to battery with charger provided with lift.
  - e) Plug battery charger in 120-volt wall outlet.
  - f) Observe charger voltage meter. Low batteries will show 14+ volts. As batteries charge the voltage will drop to 12-13 volts.
  - g) Time to charge will depend on battery use. Generally a one-shift operation will require 4-6 hours to recharge fully.

### CAUTION!

- a. Do not attempt to remove battery covers or caps.
- b. Wear safety glasses and gloves when charging or replacing batteries.
- c. Always use charger provided.
- d. Read charger instruction prior to charging batteries.

### WARNING!

The unit using a power supply of the 115-volt AC must be disconnected from its power source. Do not work on electrical circuits unless you are a qualified electrician. DC units must have the positive cable removed from the battery terminal. Do not move the unit while maintenance is continuing to be done.

Before performing any maintenance on the unit, it must be in a fully lowered position. Do not remove hydraulic lines unless the tilter has been lowered to its lowest down position. This should be verified several times by pushing the down button on the switch (prior to electrical disconnect).

When removing hydraulic hoses, crack the fittings slowly to be sure that any hydraulic pressure that may be residual is released.


## B. TROUBLESHOOTING MAINTENANCE:

All servicing should be done by qualified personnel who should have read and understood all of the information provided in the Operating, Installation and Maintenance sections in this manual.

1. Tilt will not move up
  - a) For the 115 volt AC units:
    - i) Load is too heavy. Check weight versus nameplate rating.
    - ii) Check the power switch, fuses and overload associated with its electrical circuits.
    - iii) Check voltage at motor; motor may have failed.
  - b) For DC units:
    - i) Inspect battery voltage level for charge and recharge if necessary.
    - ii) Check terminals at the battery for corrosion or faulty connections.
    - iii) Check voltage at the motor; motor may have failed.

2. Operational noises (tilter is not moving or is very noisy when moving):
  - a) Tilter may be overloaded or jammed. Check load weights and obstructions.
  - b) For 115 volt AC motor, check voltage at terminal. Repair or replace.
  - c) Oil shortage, reservoir low or oil line failure. Repair or replace.
  - d) Down valve open, check wiring. Replace if necessary.
  - e) Air in the system causing cavitations. Check fittings and lines.
3. Motor overheats:
  - a) Excessive cycling (15 cycles per hour maximum). Check actual time in use.
  - b) Low voltage-check voltage of AC motor.
  - c) Oil starvation – check filter on the pump by removing the coil stem from the pump. Note: Do not over tighten the stem when reinstalling (maximum 4 ft/lb).
4. Tilter operating slowly:
  - a) Up cycle:
    - i) Oil starvation- check filter in reservoir.
    - ii) Oil viscosity- oil is too heavy or too thin.
    - iii) Air in cylinder- cycle tilter with no load 2-3 times and hold down the up button for 10 seconds after bottoming out on each cycle.
  - b) Down Cycle:

**FIGURE 3:  
MAINTENANCE CHECK**

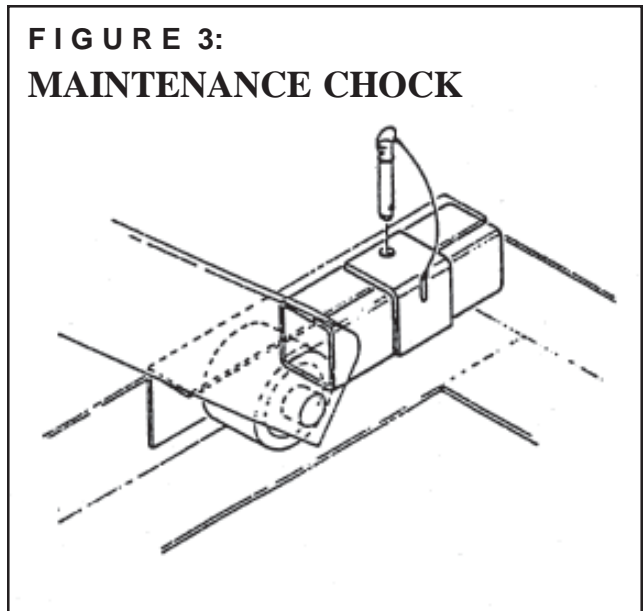

- i) Down valve dirty - remove and clean.  
Check oil condition; replace if dirty. Note: Do not over-tighten the stem when reinstalling (maximum 4ft/lbs.).
  - ii) Pinched hydraulic lines.
  - iii) oil viscosity is too heavy.
- 5. Tilter raises, then fully lowers without power:
  - a) Down valve filter is dirty. Remove and clean.  
Note: Do not over torque when reinstalling down valve (maximum 4 ft./lbs).
  - b) Leaking hydraulic lines or fittings (check for telltale oil spots and tighten).
  - c) Check valve in pump, may not be seating properly. Pump must be replaced.
- 6. Tilter will not lower when energized:
  - a) Down solenoid faulty. Check voltage of coil.  
Check continuity of coil (could be burnt out).
  - b) Down solenoid retainer nut over torque causing damage to the down valve stem. Replace.
  - c) Down valve dirty. Remove and clean.
  - d) Leaking hydraulic lines or fittings (check for telltale oil spots).
  - e) Check valve in pump -- may not be seating.  
Requires new pump.

## SECTION 6

### SERVICE

#### A. REPLACING CYLINDER SEALS:

1. Lower the tilter to its lowest position and hold down switch for an additional 10 to 20 seconds.
2. Remove the steel plate and battery cover.
3. Disconnect the electrical power:
  - a) 115-volt units must have the plug removed from the receptacle.
  - b) On DC units, remove the positive terminal from the battery.
4. Disconnect the hydraulic hose from the cylinder and cap the line to prevent hydraulic fluid loss.
5. Remove the cylinder pin. Note: loosen the set screws from the holding pin that has secured the cylinder in position.
6. Lift cylinder out of tilter.

#### CAUTION!

**When disconnecting the hydraulic hose from the cylinder, crack the fittings to be sure that the residual hydraulic fluid pressure that may be in the line is released slowly. Hold the cylinder securely while removing the pin to prevent it from falling to the floor or injuring someone that is servicing it.**

7. Clamp cylinder securely at the base end.
8. Completely collapse cylinder piston.
9. Push gland into the cylinder 1/8".
10. Remove retainer ring.
11. Remove piston rod, piston and gland from cylinder.
12. Remove rod nut, piston and gland.
13. Remove and replace seals and wipers.
14. Assemble piston and gland to piston rod.
15. Assemble rod nut to piston rod and torque to 100 ft./lb.
16. Lubricate piston and seals and install in cylinder.
17. Insert retainer ring.
18. Install cylinder and hydraulic lines.
19. Fill reservoir.
20. Cycle tilter 2 to 3 times with no load.
21. Recheck reservoir oil level and fill if necessary.

#### B. REPLACING FRONT RIGID LOAD WHEELS AND SWIVEL CASTER WHEELS:

With the tilter in its completely lowered position, raise the tilter one inch (1") using either a Johnson Bar or a crow bar and chocking the unit to maintain the wheels approximately 1/2" to 3/4" off the ground. Service one wheel at a time.

1. Unloosening the screws that hold them in position, remove the wheels and replace with new units. Note: the nut and bolt assembly has a lock washer, it is imperative that the lock washer be replaced when re-installing.

#### CAUTION!

**Do not service more than one wheel at a time. Tilter will become unstable if more than one wheel is serviced simultaneously.**

### C. ORDERING REPLACEMENT PARTS:

1. Standard replacement parts for each tilter are provided by part number and tilter models.
2. All key parts are identified and must be replaced with original equipment components.
3. Warranties will be voided where original equipment components are not used.
4. In ordering the replacement parts, be sure to include the serial number and model number of the tilter you are requesting parts for.

---

#### STANDARD DC REPLACEMENT PARTS

---

<b>Part #</b>	<b>Description</b>	<b>Used on</b>
1026-028	Hydraulic Cylinder	All Units
1000-102-01	Oldham Coupling	All Units
1026-064	Cylinder Seal Kit	All Units
C141E	Battery, Gel Cell	All Units
B249G	Battery Charger	All Units
1026-046VR	Ground Cable	All Units
80000786VR	Hand Pendant Assy	All Units
B262RC	Motor Solenoid 12V	All Units
1000-056-03	Down Solenoid 12VDC	All Units
1000-076	Down valve stem	All Units
1000-034-10	Pump HyDry 1GPM w/dwn valve	All Units
1000-046-01	Filter	All Units
B258CCW-1	Motor DC CCW	All Units
B211RC-A	Flow Control VLV	All Units
1026-037VR	Hydraulic Hose Hi-Pressure	All Units
1026-038VR	Hydraulic Hose Low-Pressure	All Units
1004-049VR	Wheel 8 x 2 Nylon w/swvl caster	All Units
1003-001VR	Wheel 8 x 2 Nylon	All Units
1004-021AVR	Wheel 3 x 3 Nylon	PT Units
C102PH	Wheel s 5 x 2 Phenolic	PTS Units
C100	Floor Lock	All Units
1026-042	Hand Control Magnet	All Units


---

#### STANDARD AC REPLACEMENT PARTS

---


<b>Part #</b>	<b>Description</b>	<b>Used On</b>
1026-028	Hydraulic Cylinder	All AC Units
1000-034CP	Oldham Coupling	All AC Units
1000-056-01	Down Solenoid	115 secondary control voltage
1000-056-02	Down Solenoid	24V AC secondary control voltage
1000-076	Down Valve Stem	All Units
1000-034-10	Pump with Down Valve	All AC Units
E225R	Motor (1 HP)	All AC Units
80000263	Hand Pendant Assy	All AC Units
E308-E36	Foot Control	Optional
B211RC-A	Flow Control Valve	All Units

**FIGURE 4: Wiring Diagram 12V DC**


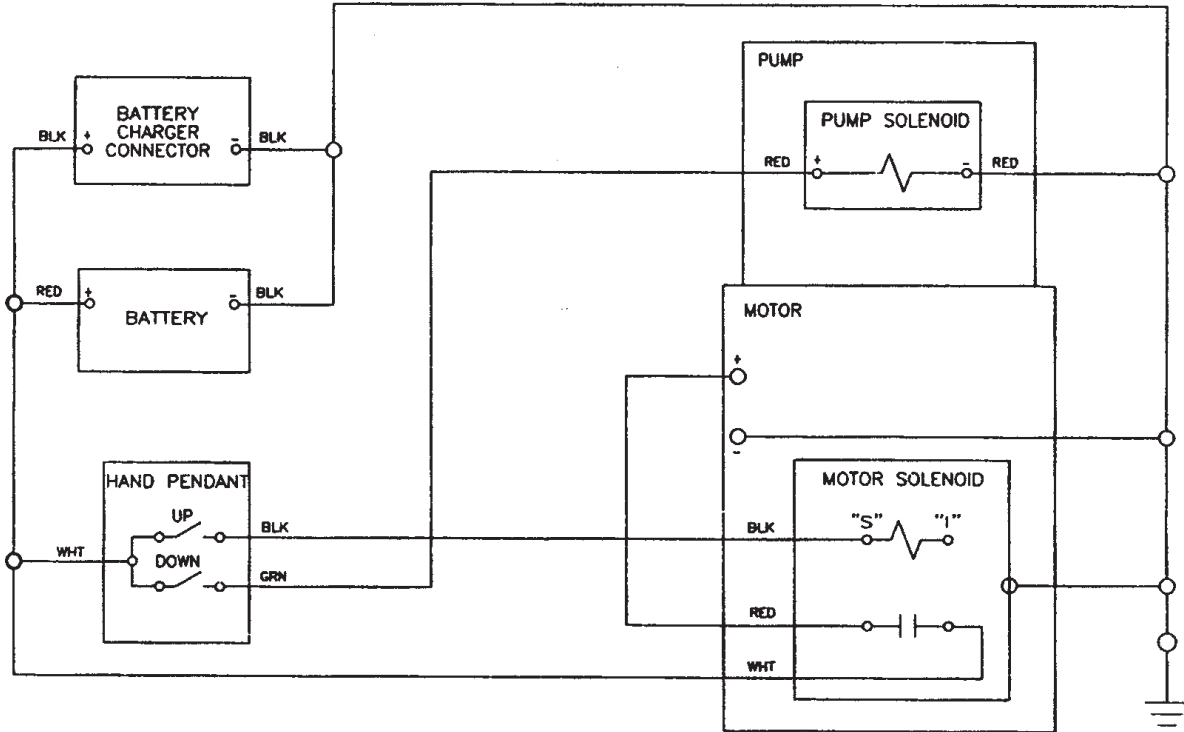


NOTE:  
DO NOT CONNECT "I" CONTACT  
TO ANY TERMINAL OR "GROUND"

**FIGURE 5: Hydraulic Schematic**

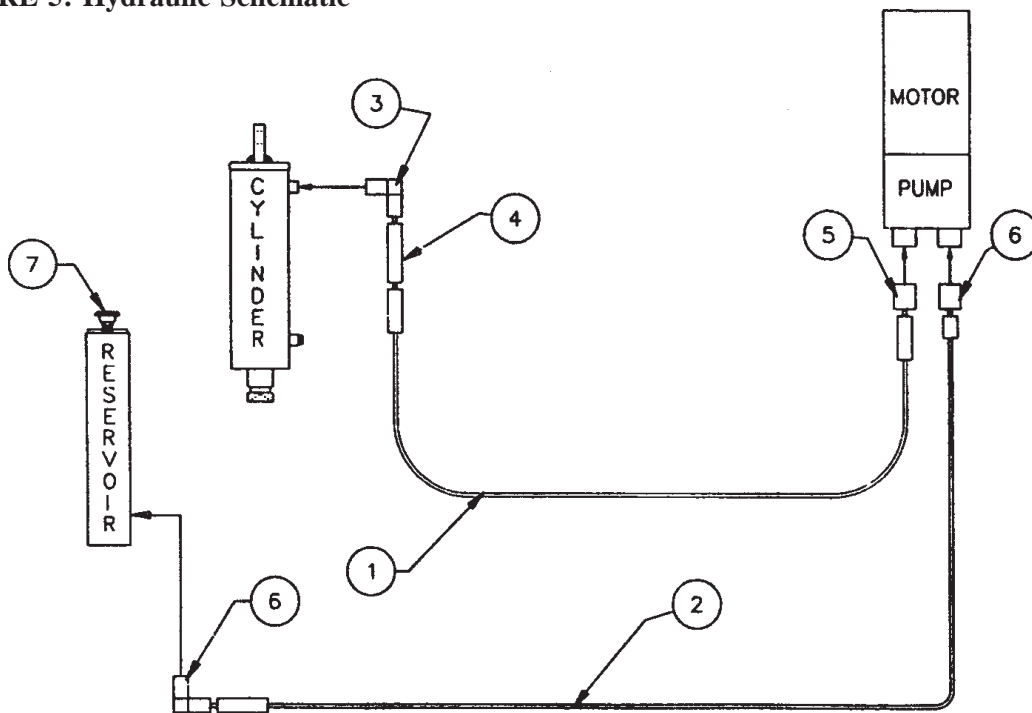

**FIGURE 6: Component Identification - DC Units**

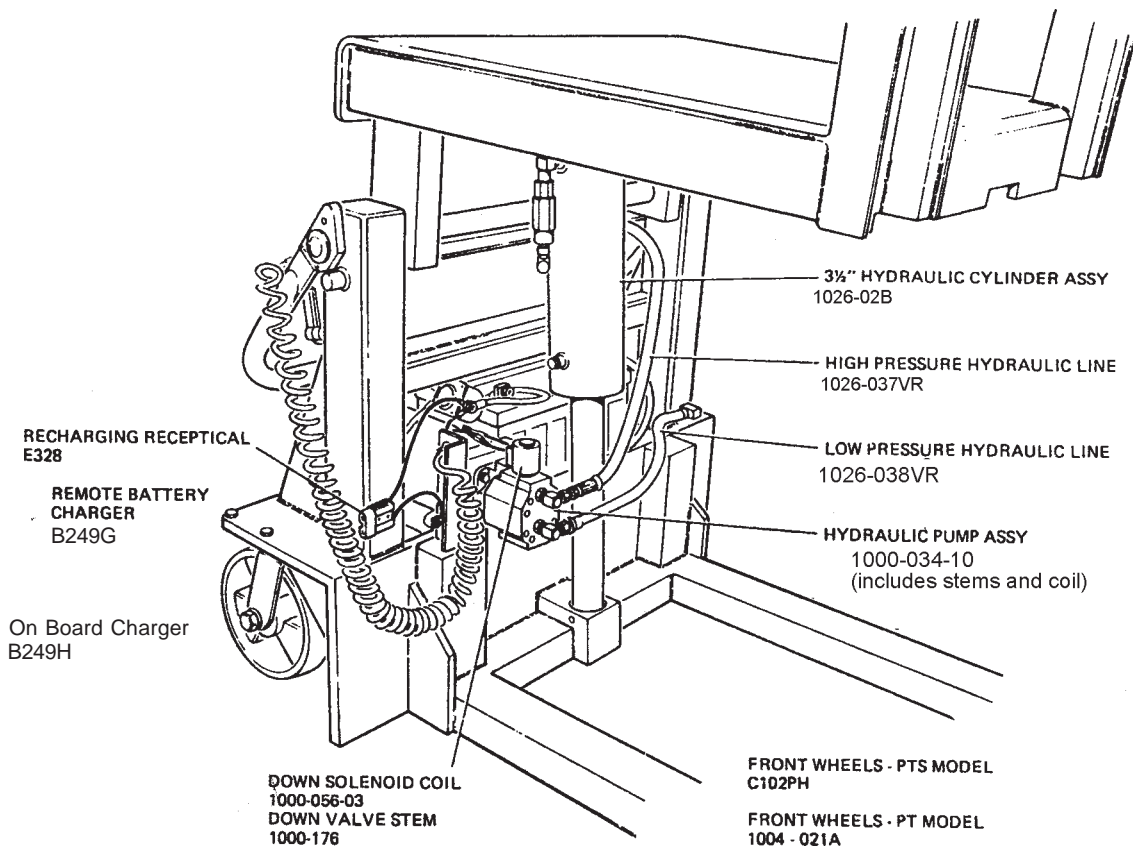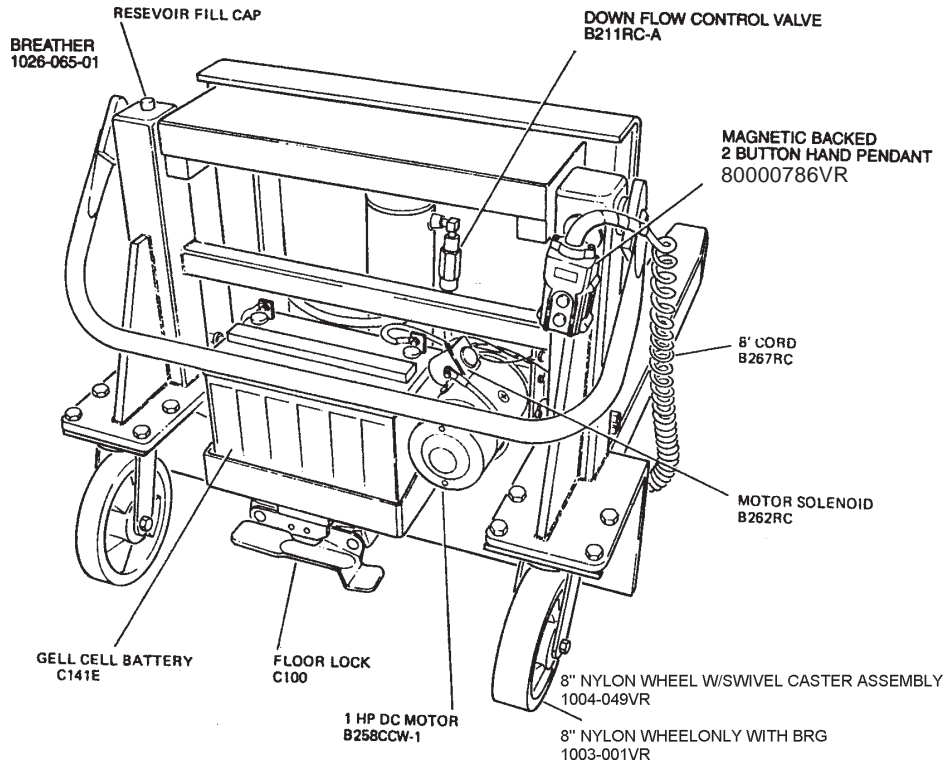

## RESTOCKING POLICY

Presto Lift, Inc.'s goal is for you to be satisfied with your order. Merchandise may be returned, but returns will be subject to a restocking fee to cover the costs Presto Lift, Inc. incurs which include but are not limited to handling, storage of the units, etc. Presto Lift, Inc. will issue refurbishing costs where end-user wear is apparent. We would prefer to not charge for these costs but find it necessary any apologize for any inconvenience. Please review the RETURN MATERIALS AUTHORIZATION (RMA) PROCEDURES.

## LIFTS

Lifts may be returned with a restocking fee according to the following schedule:

1. Standard unit or standard unit with stock options:

<b>Three or less</b>	<b>20%</b>
<b>With re-order</b>	<b>15%</b>
<b>Four or more</b> of the same model	Consult Customer Svc.
<b>With re-order</b>	Consult Customer Svc.
2. Custom engineered/modified lifts: No Returns

## PARTS

Standard parts may be returned with a 20% restocking fee. Modified or custom-engineered parts are not returnable. Unfortunately, due to potentially concealed damage, all sales of electrical assemblies are final.

## QUALITY ISSUES

Should you feel there is a quality problem, please contact the seller to ask questions and gather information on how to rectify the issue. Presto Lift Inc. reserves the right to determine potential credits, as a result of factory defects, based on its inspection of the merchandise.

## GENERAL

All products shipped from our factory have passed Quality Assurance inspection and testing. The carrier of choice has signed for, and accepted the product in new working condition. The customer should inspect to ensure it is not received damaged, has no concealed damage or is not incomplete. Parts orders are determined to be complete based upon Presto Lift, Inc. inspection sheets and carrier shipping weights.

## **RETURN MATERIALS AUTHORIZATION (RMA) PROCEDURES**

Although Presto Lift, Inc. is not legally obligated to issue a credit for any merchandise, the RETURN MATERIALS AUTHORIZATION (RMA) PROCEDURE is provided as a courtesy to our customers in the event they do not receive what they wanted.

If a customer wishes to return a Presto Lift, Inc. product, the first step in the process is to request an RMA number from Presto Lift, Inc.'s Customer Service Department. This request must be made on or before the thirtieth (30th) calendar day following the date of Presto Lift, Inc.'s invoice for the merchandise being returned.

The RMA number must appear on the outside of any packaging material for a return to be accepted and processed by Presto Lift, Inc. Customers shipping returns back to Presto Lift, Inc. from the Continental US, Canada and Mexico have thirty (30) days from the effective date of the RMA to have the merchandise arrive freight prepaid at Presto Lift, Inc. Returns from locations other than the Continental US, Canada and Mexico must be shipped within the fourteen (14) day period to arrive Free On Board (FOB) at Presto Lift Inc as soon as practical. If a customer believes Presto Lift, Inc.'s merchandise is defective, freight will be reimbursed to the original "Bill To" on the invoice if Presto Lift Inc. finds that the merchandise is defective.

Please remember that merchandise with RMA's coming back to Presto Lift Inc. from the Continental US, Canada and Mexico will not be accepted by Presto Lift Inc. if the returned goods do not arrive freight prepaid at Presto Lift Inc. within the fourteen (14) day effective period.

All credits issued are less restocking fees as applicable, plus any assessed outbound/inbound in-transit damages.

Return addresses: please refer to your RMA for the address to which your product should be returned.

Presto Lift Inc.  
715 Highway 77  
Manila, Arkansas 72442

Telephone: 800-343-9322  
Fax: 888-788-6496

## Ordering Replacement Parts

Presto Lifts has carefully chosen the components in your unit to be the best available for the purpose. Replacement parts should be identical to the original equipment. Presto Lifts will not be responsible for equipment failures resulting from the use of incorrect replacement parts or from unauthorized modifications to the unit.

Presto Lifts can supply all replacement parts for your lift. With your order, please include the model number and the serial number of the unit. You can find these numbers on the name plate. This plate is located within the scissors mechanism.

To order replacement parts, please call the Presto Parts Department. Parts are shipped subject to the following terms:

- FOB factory
- Returns only with the approval of our parts department.
- Credit cards preferred (except parts covered by warranty).
- Freight collect for truck (except parts covered by warranty).
- Freight – prepaid and invoice for small parcel shipments (except parts covered by warranty).

Parts replaced under warranty are on a “charge-credit” basis. We will invoice you when we ship the replacement part, then credit you when you return the worn or damaged part.

### **Presto Parts Department**

21 Park Street  
Attleboro, MA 02703

Telephone: 800-343-9322

FAX: 888-788-6496

Email: [service@PrestoLifts.com](mailto:service@PrestoLifts.com)

**[www.PrestoLifts.com](http://www.PrestoLifts.com)**

# Presto Lifts Limited Warranty Policy

Presto Lifts warrants all of its products against defects in the welded structural frame and, if applicable, scissor legs from faulty material and workmanship for a period of five (5) years from the date of invoice.

A lifetime limited warranty is provided for the Airstroke Actuator™ in all pneumatic lifts against any defect due to faulty material or workmanship.

All batteries are covered under a separate limited warranty from the battery manufacturer for a period of one year from the date of invoice.

All other components have a limited warranty against defects in faulty material and workmanship for a two (2) year period from the date of invoice date of invoice and 30 day limited warranty on labor. Please note that prior authorization from Presto Lifts is required on all warranty work.

There are no implied warranties of any kind, more specifically, there are no warranties of merchantability or fitness for any particular purpose. Presto Lifts' sole warranty shall be as set forth in this limited warranty.

Presto Lifts will elect to repair or replace a defective component without charge, if any components should become defective within the limited warranty period. Proof of purchase is required for warranty. The charge for shipping the defective component is the responsibility of the buyer and must be accompanied with an RMA number. The shipping charge to return the component to the buyer is the responsibility of Presto Lifts, Inc.

This limited warranty does not cover labor expense for removal or reinstallation of components after thirty days. This limited warranty shall not cover, among other things: damages resulting from foreign matter or water, failure to provide reasonable and necessary maintenance, and if applicable, use of product while charger is plugged into an AC outlet, or failure to follow operating instructions. The limited warranty is not valid for damage resulting from negligence, accident, unreasonable use, abuse or misuse, exceeding data plate capacities or altering the product without Presto Lifts authorization.

Presto Lifts expressly disclaims and excludes any liability for consequential, incidental, indirect or punitive damages or financial loss to people or property resulting from any breach of warranty or the operation or failure of this product.

Presto Lifts makes no representation that this product complies with local, state, or federal safety/product standards codes. Should this product fail to comply in any way with those codes, it shall not be considered a defect of materials or workmanship. Presto Lifts shall not be held liable for any damages resulting from noncompliance. It is the dealer's responsibility to exercise this limited warranty. This limited warranty is provided to the original purchaser (defined as the original end user) and is nontransferable. This constitutes the complete and final agreement involving Presto Lifts and limited warranty obligations for products.

# Go Presto LIFTS™

MANY NEEDS REQUIRE  
MANY OPTIONS...



Lift  
Stik



Post  
Tables



Double Lift  
Table



Lift  
Table



Portable  
Lift



P3



Counterweight  
Stacker



Pallet  
Jack



Pneumatic  
Lift/Tilt

Call Presto Sales  
for stock or customized lift inquiries at

**800-343-9322**

Email: [sales@prestolifts.com](mailto:sales@prestolifts.com)



Portable  
Tilter



Floor  
Level  
Lift



Stacker